

 
Door Chime/ 200·WIRE

Dørklokkesett / Dörrklocka / Ovikello

2 YEAR WARRANTY



Congratulations with your new wireless door chime. This instruction manual explains the product and we advise you to read this carefully so that proper use is ensured. It is important to install this product in accordance with the fitting instructions below. Failure to do so may render your guarantee void. The instruction manual should be kept as long as the door chime is in use.

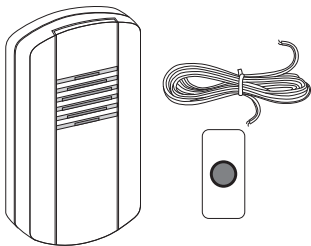

CONTENTS:

- Push Button
- Chime
- 8 meter wire
- Fittings
- Manual instruction Danish / English

FUNKTION:

This chime sounds eight tones and are powered by batteries. Connect the cable as shown in figure 1.

FITTING INSTRUCTIONS:

- Remove the front cover of Bell Push
- Mount it on the door jam with the screws included.
- Snap the front cover back on.

Do not mount the Chime unit on the door.

INSTALLATION:

- Remove the front cover of chime unit and connect bell push cable as shown in figure 1.
- Insert 2 x 1.5volt alkaline batteries ("AA", LR6 & UM3 – not included) into the battery compartment, ensuring the battery polarity match the internal markings.
- Snap the front cover back on.

Your door chime is ready to use.

MELODY SELECTION:

Play the selected melody:

When connect the bell push cable as shown in figure 1, the door chime unit will play only the selected song whenever bell push is pressed. You can select the song by press the song selector located on the right hand corner. There are total of 8 melodies as follows:

- | | | |
|----------------|----------------|-------------------|
| 1) Westminster | 2) Ding Dong | 3) Ding-Dong-Ding |
| 4) Tubular – 1 | 5) Orchestra | 6) Tubular – 2 |
| 7) Trumpet | 8) Dog Barking | |

Once you select your song, stop there then snap the front cover back on, your door chime is ready to use and will play the song you selected when bell push is pressed.

Play the 8-melodies in sequence:

When connect the Bell Push cable as shown on figure 2, then door chime unit will play the song in sequence on the song list (as stated above), snap the front cover back on, your door chime is ready to us

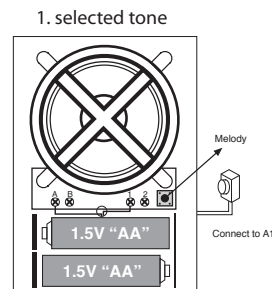 


Figure 1

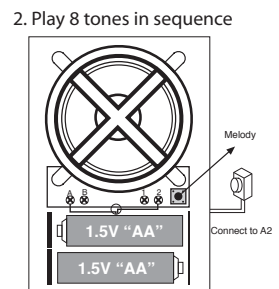 


Figure 2

CONFORMATIES:



RECYCLING:

Do not discard the unit with household waste, but in compliance with currantly enforced regulations.

In compliance with the Directive 2002/96/CE relative to waste from electrical and electronic equipment (WEEE) this product must be recycled.



TECHNICAL DATA :

Power by battery: 2 x 1.5volt alkaline batteries ("AA", LR6 & UM3 – not included)

For more information - www.ensonordic.com

01.06.2017