

 
Door Chime/ 300·WIRE

Dørklokkesett / Dörrklocka / Ovikello

2 YEAR WARRANTY



Congratulations with your new wireless door chime. This instruction manual explains the product and we advise you to read this carefully so that proper use is ensured. It is important to install this product in accordance with the fitting instructions below. Failure to do so may render your guarantee void. The instruction manual should be kept as long as the door chime is in use.

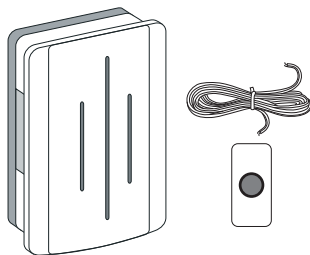

CONTENTS:

- Push Button
- Chime
- 8 meter wire
- Fittings
- Manual instruction Danish / English

FUNKTION:

This chime sounds two tones and can be powered by transformer or batteries. Using Lighted Pushes require the use of a (8-12 volt / 1 amp) transformer. Connect the cable as diagrams shown.

FITTING INSTRUCTIONS:


- Remove the front cover of Bell Push
- Mount it on the door jam with the screws included.
- Snap the front cover back on.

Do not mount the Chime unit on door.


- Remove the front cover of Chime unit and connect Bell Push cable as diagrams shown.
- Insert 4 x 1.5volt alkaline batteries ("C", R14 & UM2 – not included) into the battery compartment, ensuring the battery polarity match the internal markings.
- Alternatively powered the Chime unit by transformer and connect your cables as diagram shown.
- Snap the front cover back on.

Your door chime is ready to use.

CONNECTION - BATTERY OPERATION:

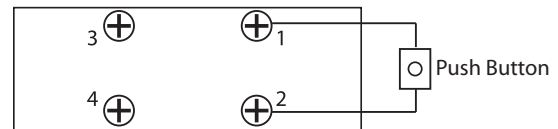

CONNECTION - TRANSFORMER OPERATION:

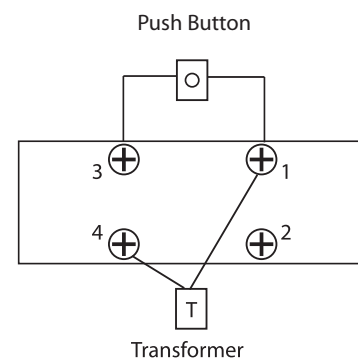

CONFORMATIES:

CE



RECYCLING:

Do not discard the unit with household waste, but in compliance with currently enforced regulations.



In compliance with the Directive 2002/96/CE relative to waste from electrical and electronic equipment (WEEE) this product must be recycled.

TECHNICAL DATA :

Power by battery: 4 x 1.5volt alkaline batteries ("C", R14 & UM2 – not included)

Power by transformer: 8-12 volt / 1 amp transformer (not included)

For more information - www.ensonordic.com

01.04.2017